

Component List:




If your flares already have the edge trim and pocket hardware installed, skip to Front Flare Installation Step 4.

STEP 2 - EDGE TRIM INSTALLATION

A. Peel two to three inches of red vinyl backing away from Edge Trim (GP1-0007) tape. Applying the adhesive side of the edge trim to the inner side of the flare, affix the edge trim to the top edge of the flare (the portion that comes in contact with the vehicle).

B. Press edge trim into place along the top edge of the flare in one-foot increments, pulling red vinyl backing free as you continue to work your way around the top edge of the flare. Trim flush with ends of flare.

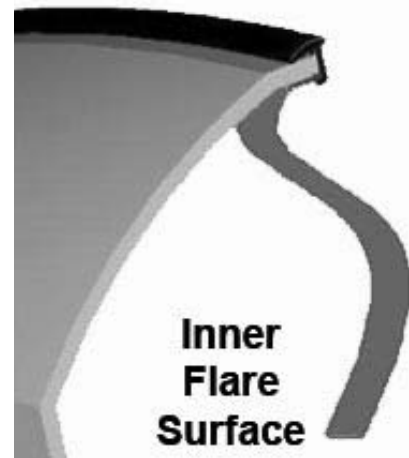


Pocket Hardware Installation:



Put a Washer (WA1-0012) on each Bolt (SW1-0067).




Put each Bolt/Washer combination through a pocket hole in the flare, Bolt head and Washer on the outside.

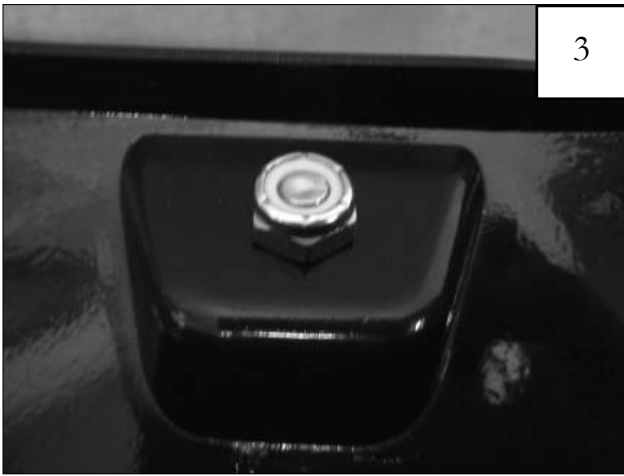

Place a Nut (NU1-0019) over the end of each Bolt and tighten, using a 1/2" wrench for the Nut and the supplied Torx Bit (SW1-0052) for the Bolt. Repeat for remaining pockets.

Note: For Platinum Edition, after you remove the factory flare, there are additional screws to be removed. These screws will be used for reinstallation.

Front Flare Installation Procedures (Passenger's Side):

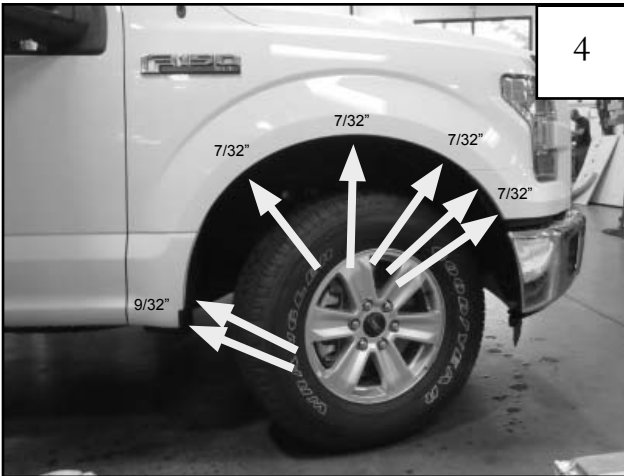


Remove five factory screws with a 7/32" socket wrench. Remove two rear most factory screws with 9/32" socket wrench. Save screws for reinstallation.

Note: For Platinum Edition, after you remove the factory flare, there are additional screws to be removed. These screws will be used for reinstallation.




Hold flare to vehicle and mark one flare hole location with a grease pencil.

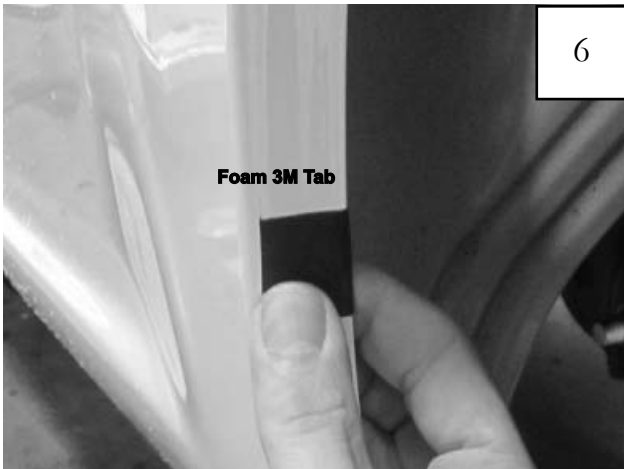

Wrap a Foam Tab (MT1-0034) around the wheel well sheet metal, centered over the mark made in Step 5.



Install a Clip (CL1-0009) over the Tab (MT1-0034) placed in Step 6.

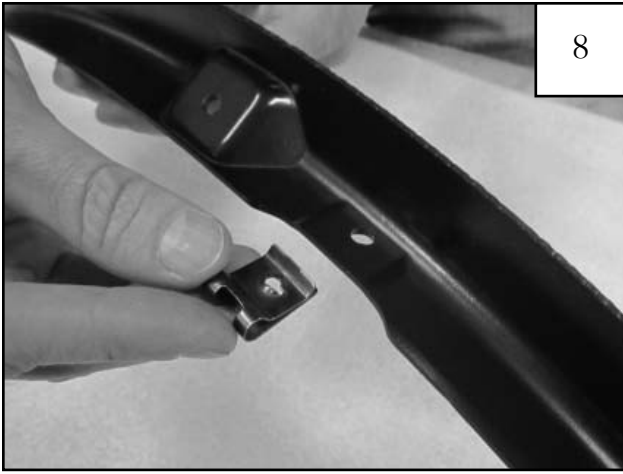

8

Attach 3 "U" clips (CL1-0022) to the inner bracket as shown.




9

Line up the holes in the inner piece with the three uppermost factory holes. *NOTE: Driver's side inner piece is marked with an "LR" and passenger's side inner piece is marked with an "RR".*



10

Using a 7/32" socket wrench, reinstall the factory screws through the inner piece.

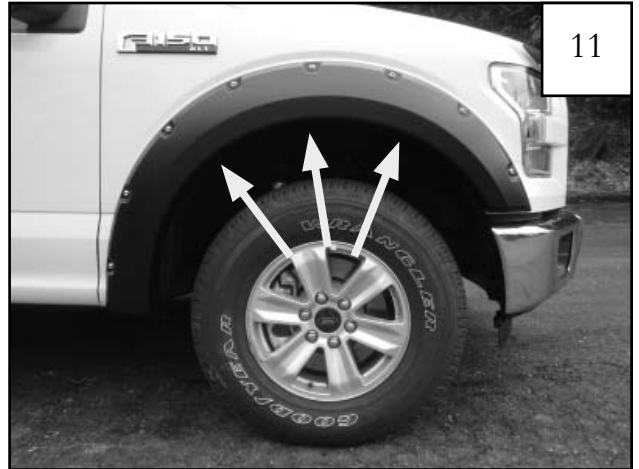

11

Position flare on fender, pressing inward on the flare, line up the flare mounting holes with the mounting clips on the inner piece. Install 3 Phillips Truss Screws (SW1-0058) through the flare and into the clips on the inner piece. Do not tighten. (3 locations)



12


Still holding flare to fender, re-install remaining factory screws removed in Step 4 using 7/32" and 9/32" sockets and wrench. Using a phillips screwdriver, install supplied screw (SW1-0058) into Clip (CL1-0009). Tighten all screws.



13

Completed front flare installation.

Edge Trim Tool Procedures:

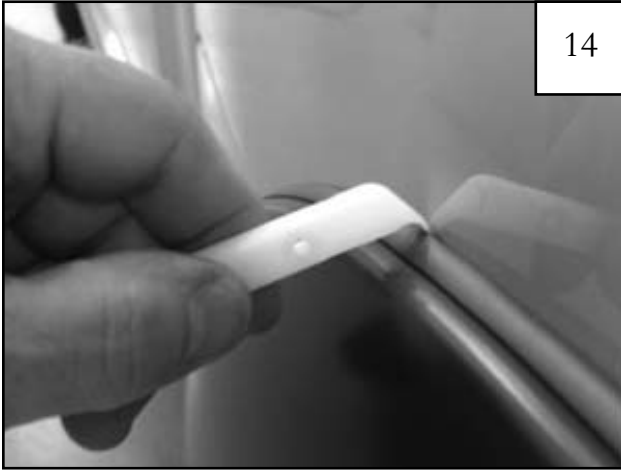

Using supplied Edge Trim Tool (ET1-0002), seat edge trim against vehicle by hooking curved end under edge trim at one end of flare. Next, slide around outer edge of flare to the other end.



Using flat end of supplied Edge Trim Tool (ET1-0002), seat edge trim against flare by inserting straight end between edge trim and flare at one end. Next, slide around entire edge to the other end.