HARDWARE DESCRIPTION		QTY.
HWKT-06125X		
CLIP-00645	5/16"-18 X 9/16" BARREL U-NUT CLIP	4
HHCS-00665	5/16"-18 X 1" GRADE 5 HEX CAP SCREW	4
FLTW-00750	5/16" USS FLAT WASHER	4
CARB-00661	3/8"-16 X 3/4" GRADE 5 CARRIAGE BOLT	6
FLHB-00688	3/8"-16 X 1" GR. 5 HEX SERRATED FLANGE BOLT	12
FLNT-00664	3/8"-16 GRADE 5 SERRATED FLANGE NUT	6

| PARTS INCLUDED	QTY
Running Boards	2
Rocker Panel mounting Brackets	6
Threaded clamp plates	6

GROWLER
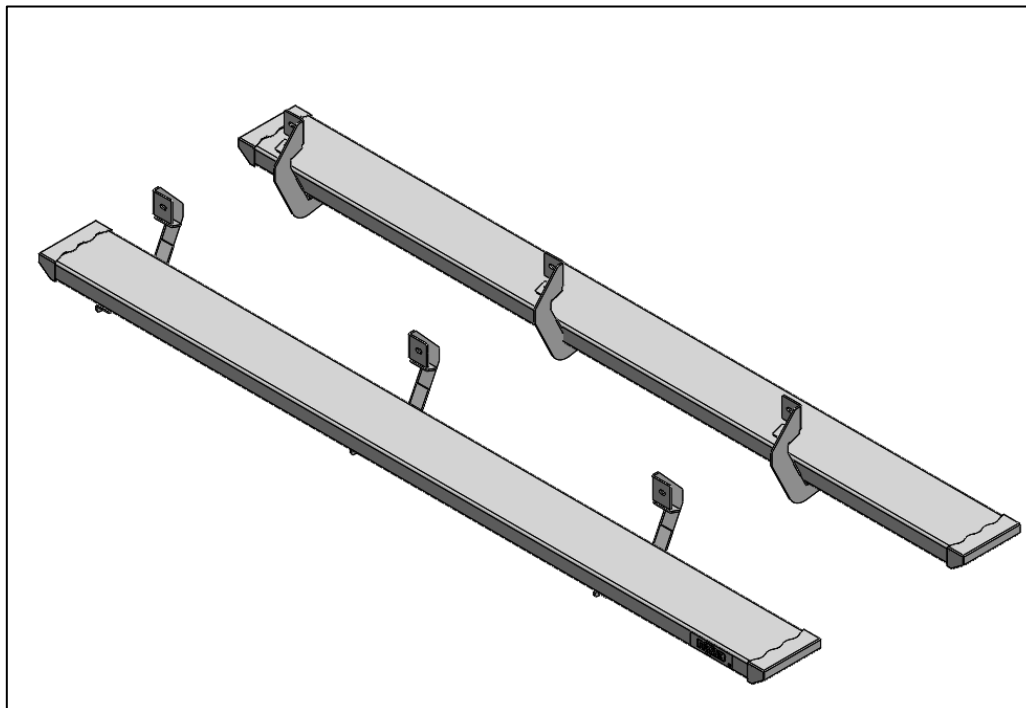
Step 1 Starting with driver side, remove any factory-equipped running boards, fasteners, and discard.

Step 2 Next, install the three 5/16" clips into the upper factory mounting locations. *(Fig. A) Note: The center bracket location will not be used in some models.*

Fig. A

**Threaded 5/16" Clip**

Bracket Configuration
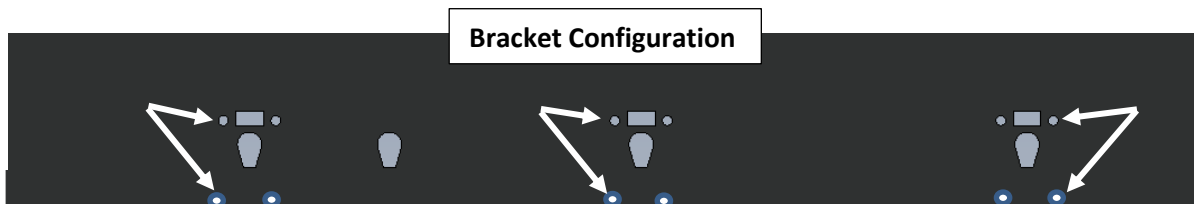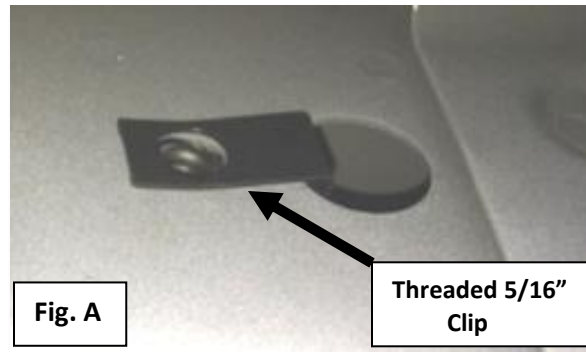
Step 3 Install the three rocker panel mounting brackets using the supplied 3/8" x 3/4" carriage bolts and 3/8" Flanged nuts for the bottom holes. Use the 5/16" x 1" hex bolts and 5/16" washers for the top holes. Leave loose at this time.

Step 4: Set running board along the top of all four brackets and center along the cab.
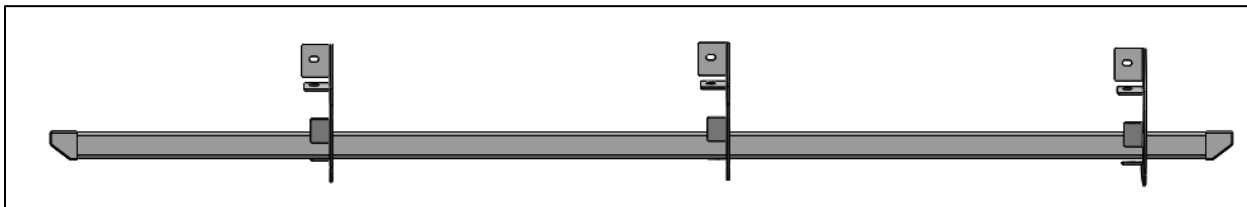
Step 5: Insert the supplied threaded brackets (x3) inside the running board lip over the top of each bracket.
Step 6: With the supplied 3/8" x 1" flange hex bolts, secure each mounting location and leave loose.
Step 7: After finial adjustment, tighten all running board threaded mounts.
Step 8: Next, adjust frame brackets so the running board is level with body of the vehicle and tighten all factory-mounting locations.
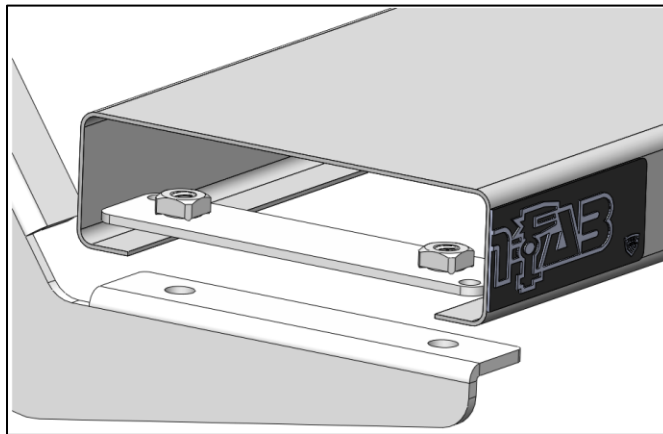
Step 9: Re-peat steps 2-8 for passenger side.