



Preparation:

- Disconnect the negative battery terminal. Park the vehicle on level ground and set the emergency brake.
- We recommend reading through the installation instructions in whole before performing the work.
- When button head bolts are being used, install the supplied washer on the nut side. Then, hold the bolt stationary and only turn the nut to tighten. Do not turn the bolt to tighten hardware assembly, unless otherwise noted.
- Estimated Installation Time: **2 Hours for OEM Removal/Bumper Installation**

1 Additional Hour to Wire Center Light

1 Additional Hour to Wire Side Lights

****This installation requires 2 people for best results****

****Labor Rates are based on a vehicle with no pre-existing damage. Wiring labor is based on a standard wiring procedure with light switches installed in an easily accessible location. Custom light triggering or switch mounting location will result in a greater labor charge.****

You will need the following tools:

- | | | |
|-------------------------|---------------|-------------------------|
| - Ratchet | -15mm Socket | -18mm socket |
| - 9/16" Socket & Wrench | - 13mm Socket | -Long ratchet extension |

Included in Kit:

- | | |
|---|---------------------------------------|
| 6 - Hex Head Bolts (3/8-16 x 1") | 6 - Flat Fender Washers (3/8") |
| 6 - U-Nuts (3/8"-16) | |

Plastic bumper removal (steps 1-8)

Steel Bumper removal (Steps 9-15)

ADD bumper install (Steps 16-20)

OEM Skid Plate Modifications (Step 21-24)

ADD Skid Plate install (Step 25-26)



Plastic Bumper Removal:

1. Remove the 6 skid plate bolts (15mm) shown in (Fig A).

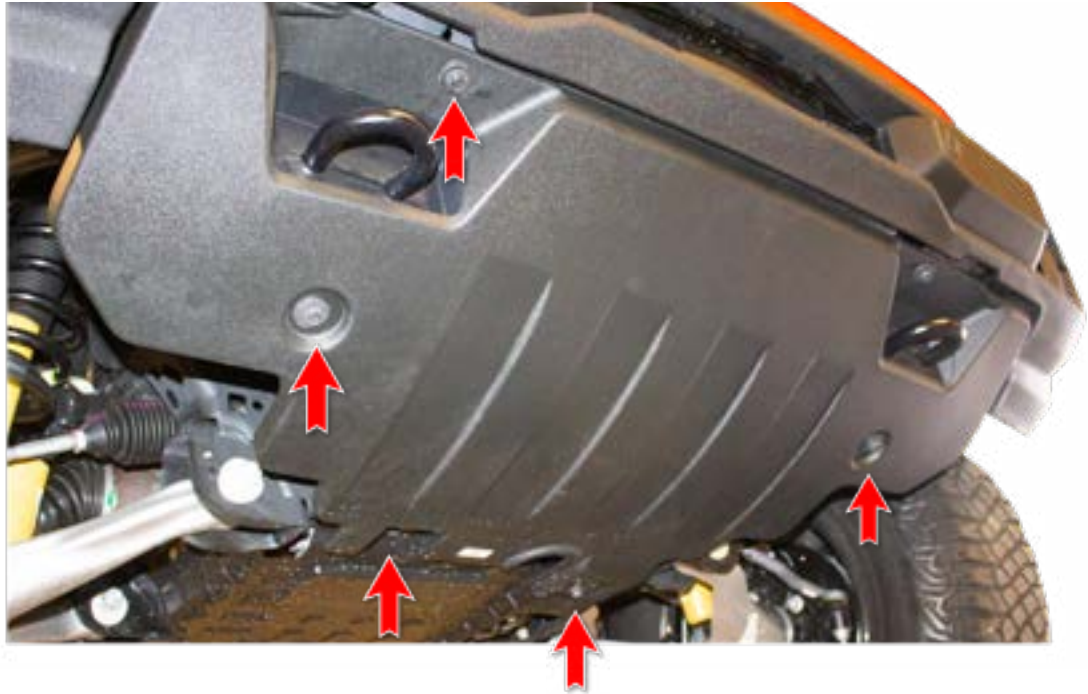


Fig A

2. Remove the 6 skid plate bolts (15mm) shown in (Fig A). Pull off the cover on each side of the bumper and unplug the sensors by spreading the sensor bezel tabs apart, which will release the tension and allow you to easily push back the sensors. (Fig B) **Make sure to keep track of the position/orientation of the parking sensors so that you can install them in the same position/orientation on your new bumper.**

Spread
These
Tabs

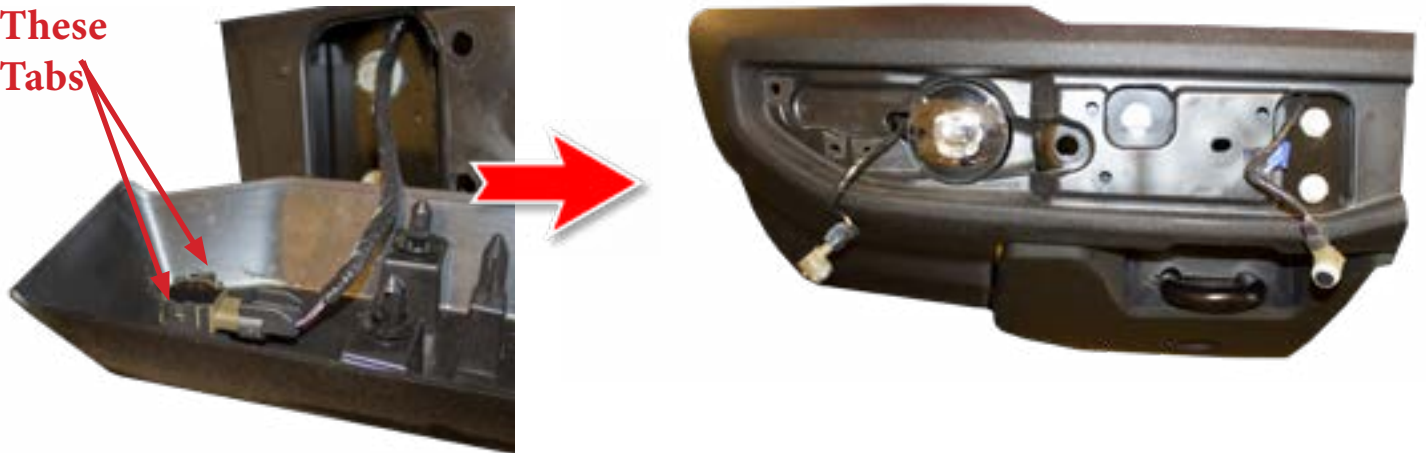


Fig B



3. After the sensor have been removed squeeze the black sensor bezel tabs together, which will allow them to pull forward off the bumper. Keep track of the position/orientation of each sensor bezel so that you can install them in the same position/orientation on your new bumper. (Fig C)



Fig C

Squeeze together

4. Disconnect the main wiring harness located on the driver side of the Bronco (**Found next to the headlight, up in the corner**). (Fig D)



Fig D



5. Before removing the 3 bolts that hold the OEM bumper in place located by the fog lights after the cover has been removed, (Fig E)


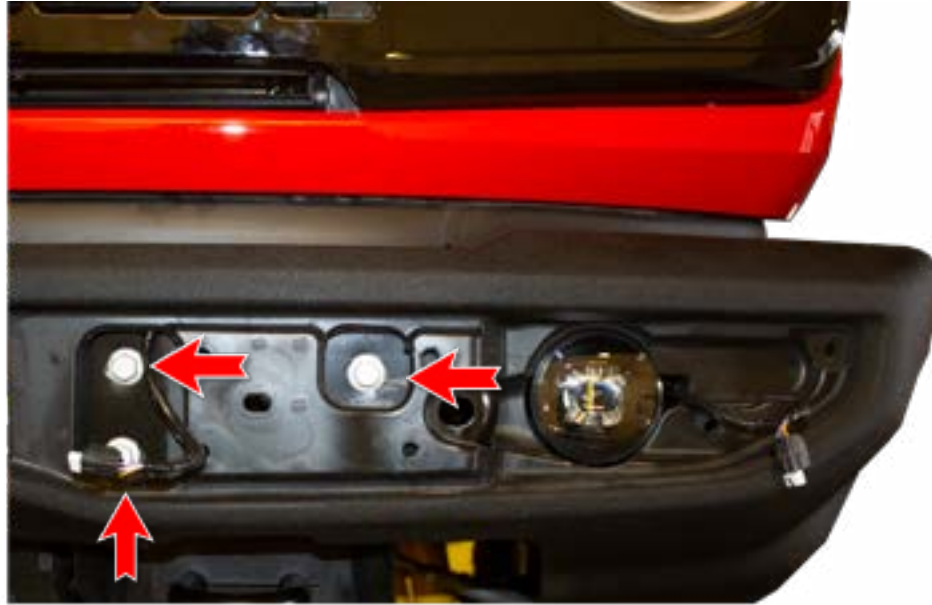


Fig E

6. After the OEM bumper has been removed cut the D-rings flush with the bracket to gain clearance for the ADD Stealth fighter. (Fig F)

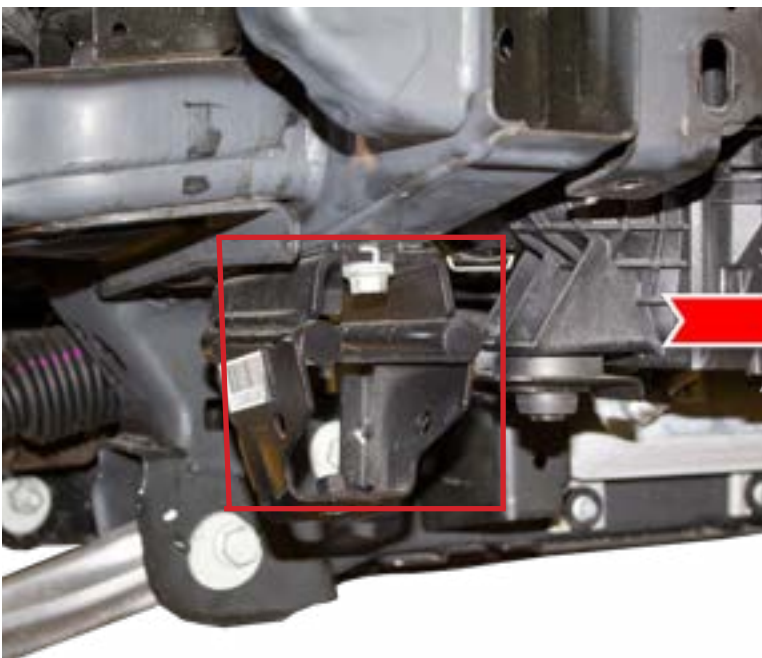

Cut D-rings flush with bracket



Fig F



7. There is a metal plate held in place by 8 bolts, 4 on each side. This plate needs to be removed to access the wiring harness for removal. (Fig G)



4 bolts on each side

Fig G

8. Remove wiring harness from the OEM bumper by disconnecting the fog light, then pulling out all the tabs that secure the harness in place. (Fig H)

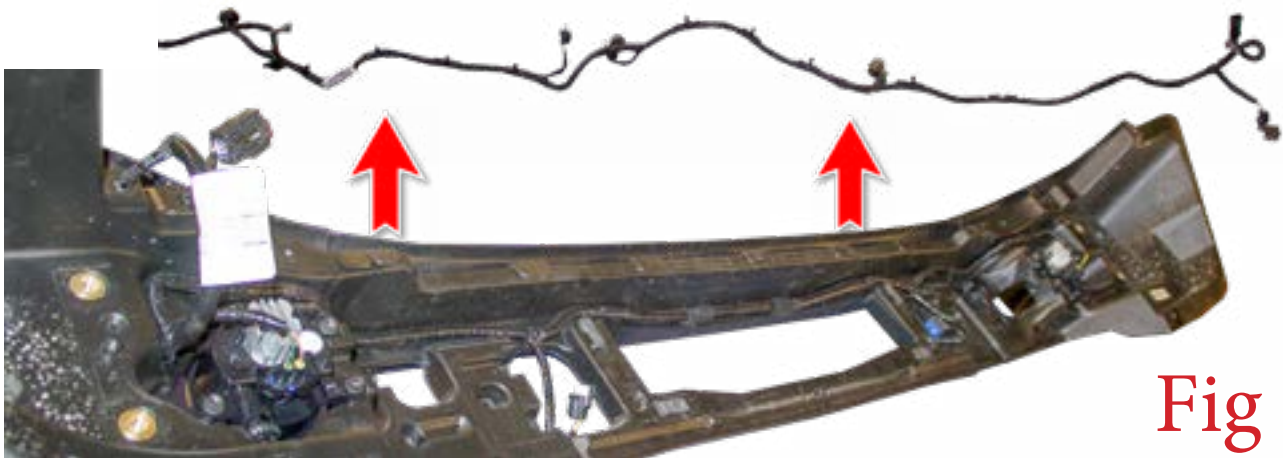


Fig H



Steel Bumper Removal:

9. There are 4 plastic clips on each side of the bumper that need to be removed to take off the plastic plate. (Fig I)



Fig I

10. After the plastic cover has been removed from both sides, the tow hooks will be visible. There are 3 bolts that hold the tow hooks on each side for a total of 6 bolts size 15mm. (Fig J)



Fig J



11. Disconnect the main wiring harness which is located next to the headlight, After the harness has been disconnected the bumper can be removed. (Fig K)



Fig K



12. Remove the plastic intercooler shroud, no tools are required. It is clipped in place to remove just unclip and pull out. (Fig L)



Fig L

13. After the bumper has been removed, disassemble the metal plate that holds the sensors/wiring harness. To remove the metal plate, there are 4 bolts on each side size 13mm for a total of 8. Then there are 3 Torx-40 button heads that located on the top of bumper on each side for a total of 6 T-40 bolts that need to be removed for disassembly. (Fig M)

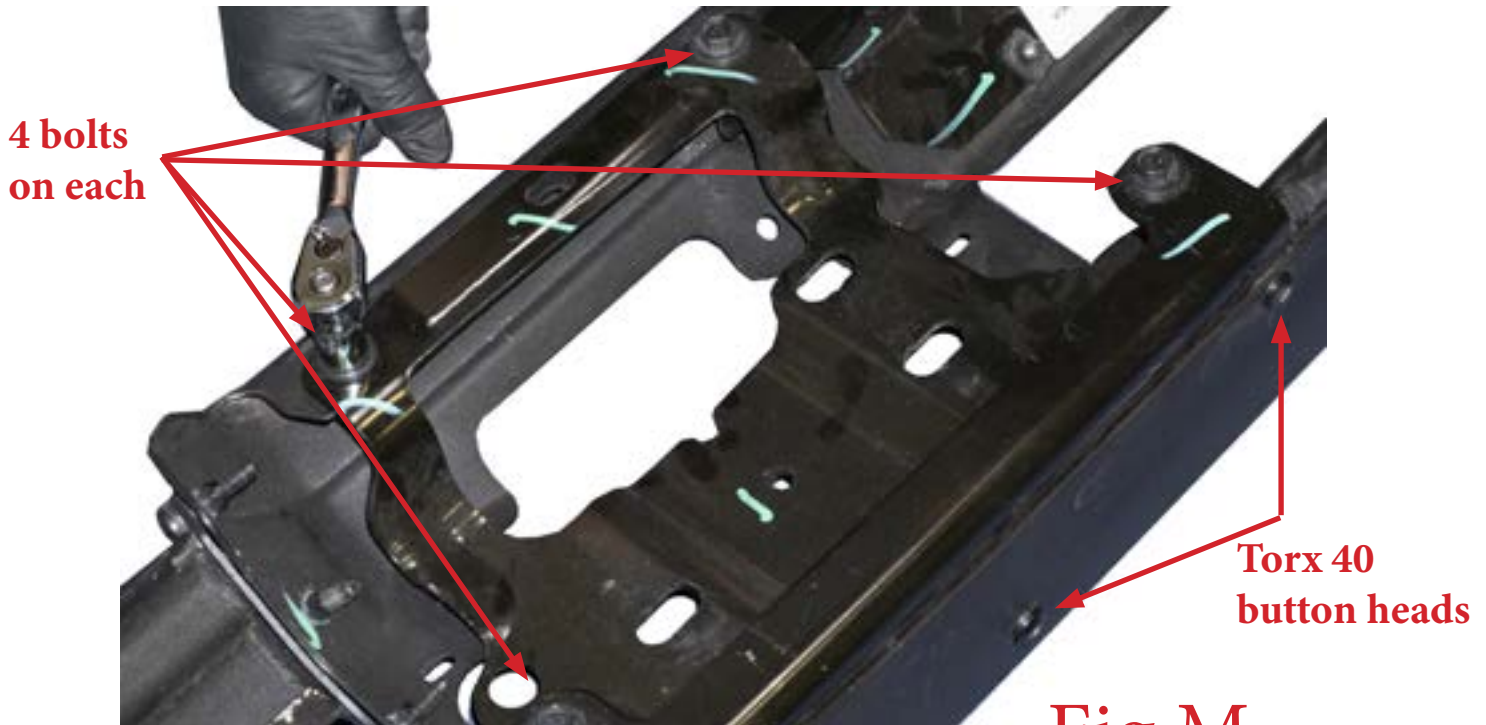


Fig M



14. After the metal plate has been removed from both sides, disconnect the wiring harness and unplug the sensors from the bumper. (Fig N)



Spread the tabs on each side of the sensor to release it and pull out

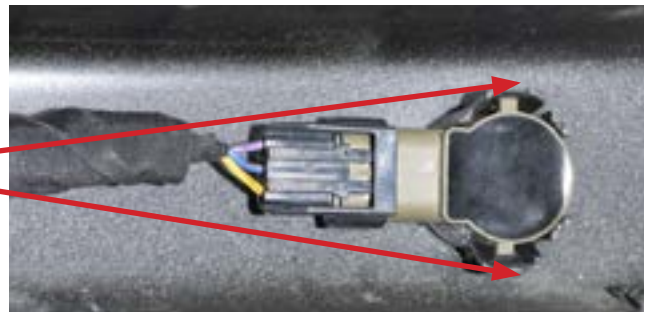


Fig N



15. After the harness has been pulled then remove the sensor bezels by squeezing them together then pulling out of the bumper. (Fig O)




**Squeeze together on the
inside of the bumper
then push out**



Fig O



16. After the OEM bumper has been removed cut the D-rings flush with the bracket to gain clearance for the ADD Stealth fighter. (Fig P)

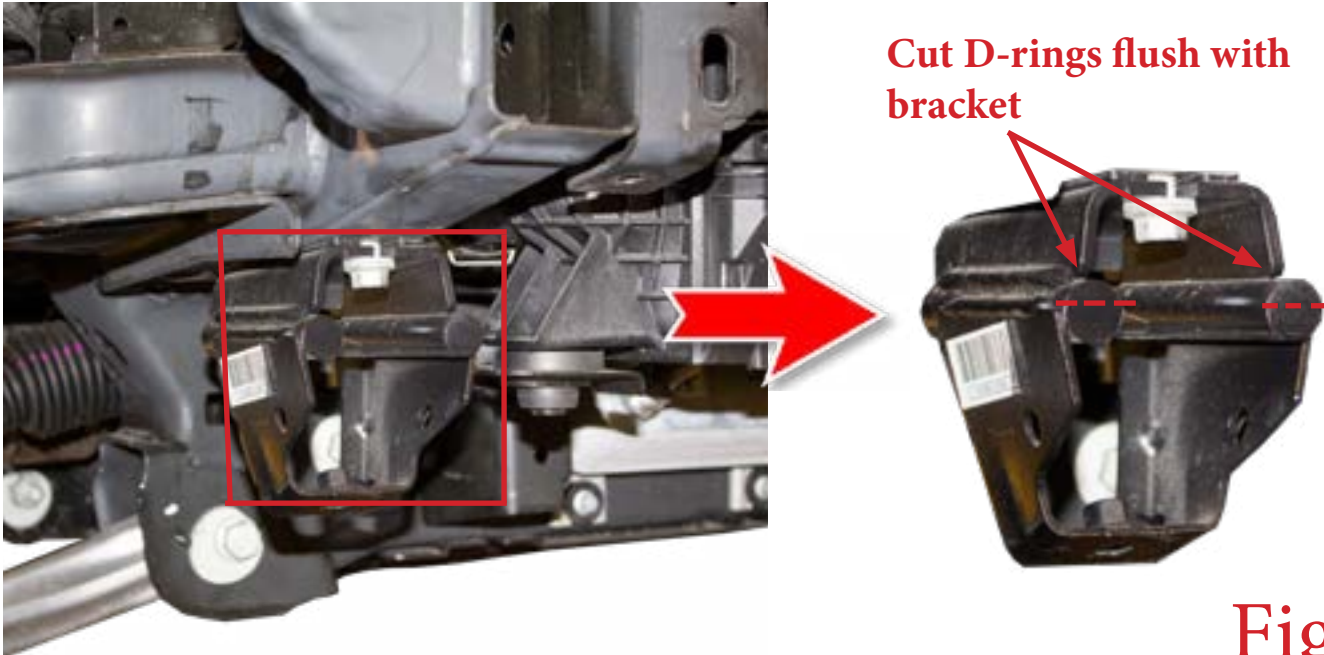


17. Install the 4 sensor bezels rings into the ADD rock fighter bumper, after the rings have been installed than put the sensor plugs in place following the same position/orientation as they were on the OEM bumper. (Fig Q)



18. After the sensor bezels have been installed transfer over the wiring harness into the ADD rock fighter bumper and zip tie to secure the harness. Also, now is a good time to install any additional lights into the bumper.



19. After the wiring harness has been installed, insert the 6 nut tabs into the ADD rock fighter bumper. (Fig R)

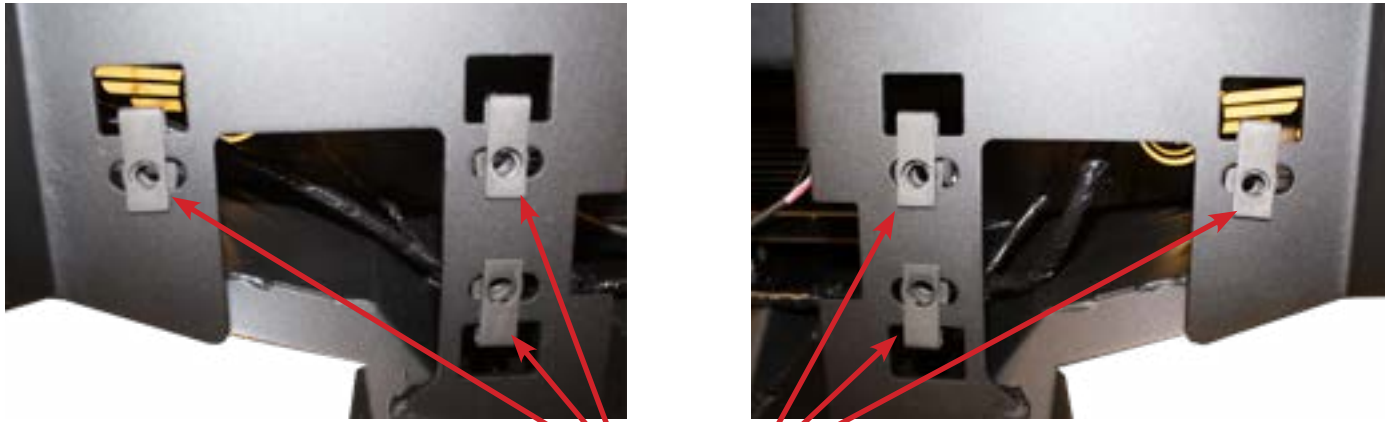

6 U-nuts

Fig R

20. After the nut tabs have been inserted on the bumper, you are ready to install the bumper. First align it in place where the nut tabs are visible through the frame horn than run the bolt through to get it started . There are 3 nut tabs on each side, when installing leave the bolts lose to adjust the bumper height into place before fully tightened . For the best results the vehicle should be off the jacks on the ground for a more accurate adjustments (Fig S)



Fig S

21. Re-connect the wiring harness after the ADD bumper has been installed.



22. (Optional) "For plastic skid plate" For The ADD Skid Plate skip to figure O" If you are going to use the stock OEM skid plate for the bronco along with the ADD Stealth fighter we recommend cutting the skid plate for better fitment. Mark a straight line about 1/4 inch away from the bolting point to be cut, also mark the corner area above the marked line. View the pictures for reference (Fig T)

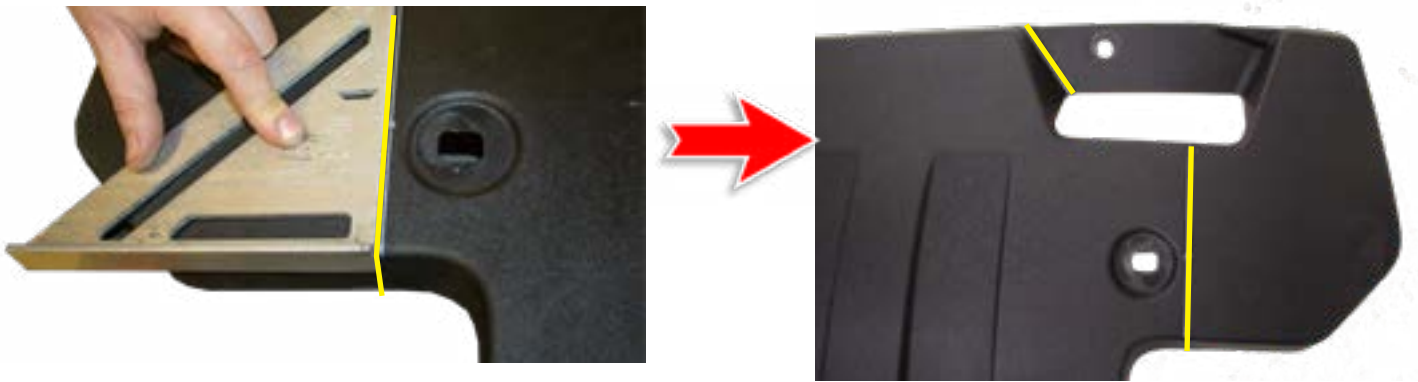


Fig T

23. There is a before and after that shows what needs to be cut. At the top of the skid plate mark a cut line where the skid plate curves down, this will free up room. Reference pictures below. (Fig U)



Fig U



24. At the top of the skid plate mark a cut line from edge to edge above the curves that drops off, this will free up room. Follow the line off the edge as shown below. (Fig V)



Fig V

25. After the cuts have been made you are now ready to install the skid plate using the same hardware that was used to hold the skid plate in place. Instead of using 6 bolts now you will only be using 4 as shown below using the 15mm stock bolts. (Fig W)



Fig W




26. Before installing the ADD skid plate with the OEM hardware, there are 2 bolts next the OEM skid plate bolting location that you will need to remove and use for the install. These bolts are 18mm. (Fig X)



18mm Bolts

Fig X

27. (For ADD Skid Plate) You will use the stock OEM hardware to install the skid plate. (Fig Y)

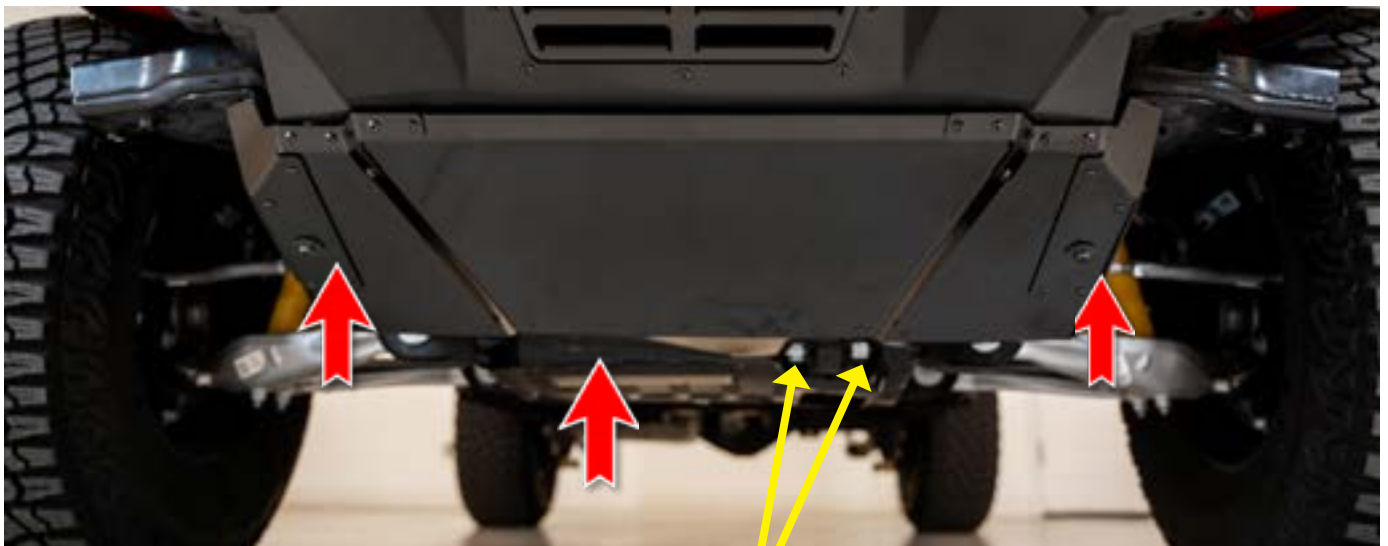

18mm bolts

Fig Y



28. Stand back and enjoy your new ADD Rock Fighter™ Front Bumper.
29. Check and re-tighten, if needed, all mounting bolts after 100 miles and periodically thereafter.

