

Toyota Pocket Style® Fender Flares Rear Pair

Rear Part #31052-02
Rev-7 7/23/2013

STEP 1 – PRIOR TO INSTALLATION

- A) Bushwacker only** approves installing the flares according to these written instructions with the hardware provided. **WARNING:** Failure to install according to these instructions will invalidate the warranty. This includes, but is not limited to using alternative installation methods, hardware, or materials. **DO NOT USE:** Loctite, SuperGlue, or similar products on the hardware or the flares.
- B) Fit:** Verify the fit of the flares to vehicle. (Some filing, sanding, or cutting may be necessary to ensure proper fit).
- C) Painting:** (Optional) if paint is desired it must be done prior to installing flares on vehicle. Clean outer surface with a good grade degreaser. **DO NOT USE LACQUER THINNER OR ENAMEL REDUCER AS A DEGREASER.** Wipe outer surface thoroughly with a tack rag prior to paint. Application of plastic adhesion promoter for ABS plastic as per your paint system manufacturer's recommendations is required. Paint flares using a high quality enamel, or polyurethane automotive paint. If painting edge trim (not recommended), use a flex additive.
- D) Performance:** Using larger Tires may increase the area required to turn the vehicle. Some Tire/Rim combinations may require lowering bump stops and or installing steering stops to prevent tire from contacting flare.
- E) Exhaust System:** Modifications may be necessary to maintain a minimum 4" clearance between flares and exhaust pipes. (Exhaust gases should not vent directly onto flares)
- F) Metal Protection:** All exposed fasteners and bare metal should be treated with rust resistant paint **BEFORE** installing flares. Spray inner fender wells with undercoating **AFTER** flare attachments have been completed.
- G) Decals:** Flares may interfere with existing decals on vehicle. If you wish, remove decals prior to installation of flares.










TOOLS FOR EASY INSTALLATION:

- Utility Knife
- Vise Grips
- Trim Tool or Flat Head Screwdriver
- Socket Wrench
- 10mm Socket
- 8mm Socket
- 3/8" Wrench
- 7/16" Wrench
- #2 Phillips Bit

LIMITED LIFETIME WARRANTY AGAINST ANY MANUFACTURING DEFECTS

- To claim a warranty, you must provide Proof of Purchase.

Included in Hardware Kit:

- | | | | | | | |
|---|--|--|--|--|--|---|
| 1. 
SP1-0005,
1/2" x .257" x 1"
Nylon Spacer,
2 pcs | 2. 
SP1-0003,
1/2" x .260" x 1/4"
Nylon Spacer,
2 pcs | 3. 
SW1-0034,
14 x 1-3/4" Phillips
Truss Tap Screw,
2 pcs | 4. 
SW1-0036,
M6-.3 x 20mm Hex
Magni Black Screw,
2 pcs | 5. 
SW1-0032,
M5-.8 x 9.5mm
SS Bttndhd Screw,
20 pcs | 6. 
WA1-0007,
.203x.625x.04
#10 SS Washer,
20 pcs | 7. 
NU1-0010,
M5 x.8 Serrated
Flange Hex Nut,
20 pcs |
| 8. 
SW1-0022,
T-30 Torx Bit,
1 pc | 9. 
ET1-0002,
Edge Trim Tool,
1 pc | 10. 
GP1-0005,
Large Wiper Style
Edge Trim,
172 inches | | | | |

STEP 2 - EDGE TRIM INSTALLATION

A. Peel two to three inches of red vinyl backing away from Edge Trim (GP1-0005) tape. Applying the adhesive side of the edge trim to the inner side of the flare, affix the edge trim to the top edge of the flare (the portion that comes in contact with the vehicle).

B. Press edge trim into place along the top edge of the flare in one-foot increments, pulling red vinyl backing free as you continue to work your way around the top edge of the flare.



Flare Pocket Hardware Installation:



Put a Washer (WA1-0007) on each Bolt (SW1-0032).




Put each Bolt/Washer combination through a pocket hole in the flare, Bolt head and Washer on the outside. See Steps 36 - 38 for installation with an Aftermarket Bumper.




Place a Nut (NU1-0010) over the end of each Bolt and tighten, using a 1/2" wrench for the Nut and the supplied Torx Bit (SW1-0022) for the Bolt. Repeat for remaining pockets.


Rear Flare Installation Procedures (Driver's Side)

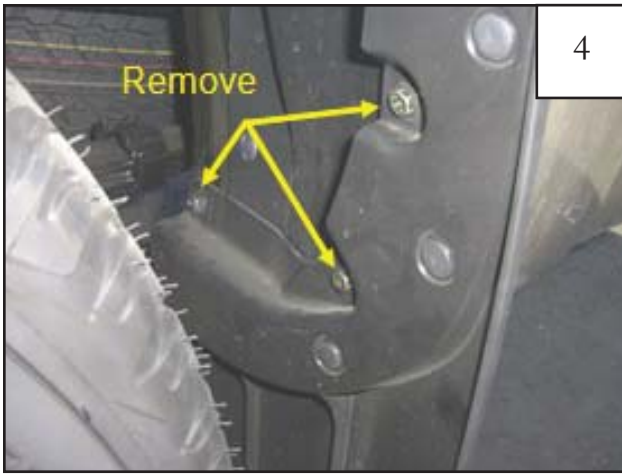

Remove three factory screws from mud flap. Save screws for reinstallation. Discard mud flap.

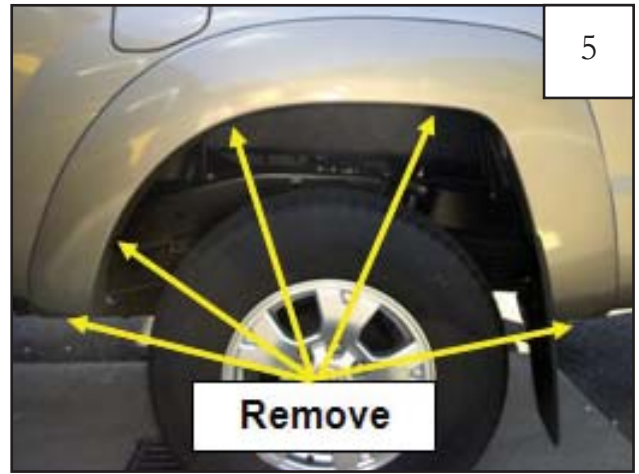


Remove five factory screws. Save screws for reinstallation. Remove flare by pulling part away from side of vehicle.

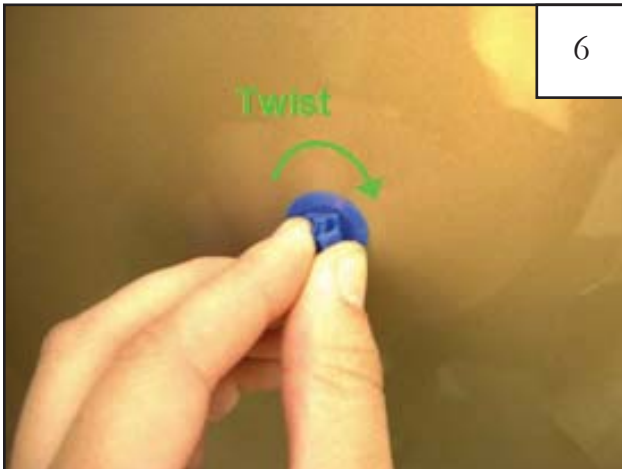

Using a clockwise twisting motion, remove eight factory plastic clips from fender. See step 8.




Remove three clips from fender using vise grips, pulling with a rocking motion. See step 8.

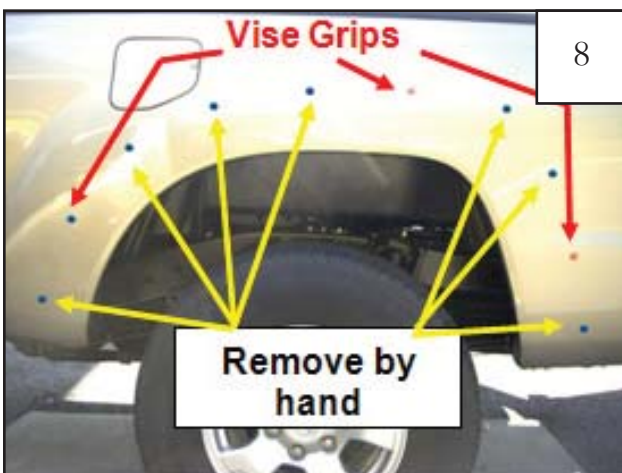

Clip locations.



Position flare on fender and install seven factory fasteners through holes in flare and into factory holes.

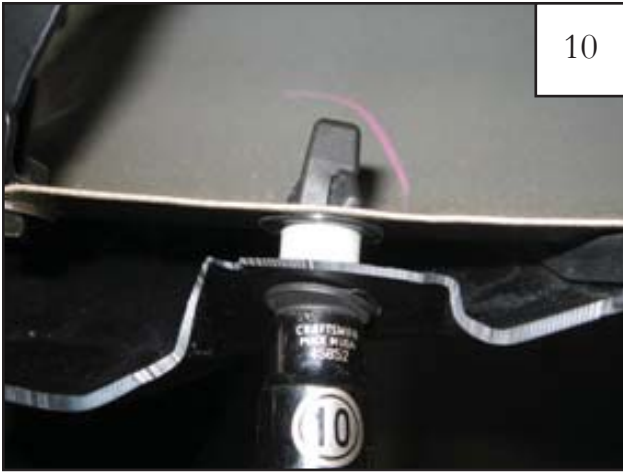


At bottom front of flare, install a supplied Screw (SW1-0036) and a Spacer (SP1-0003).



At bottom rear of flare, install a supplied Screw (SW1-0034) and a Spacer (SP1-0008).

Edge Trim Tool Procedures:

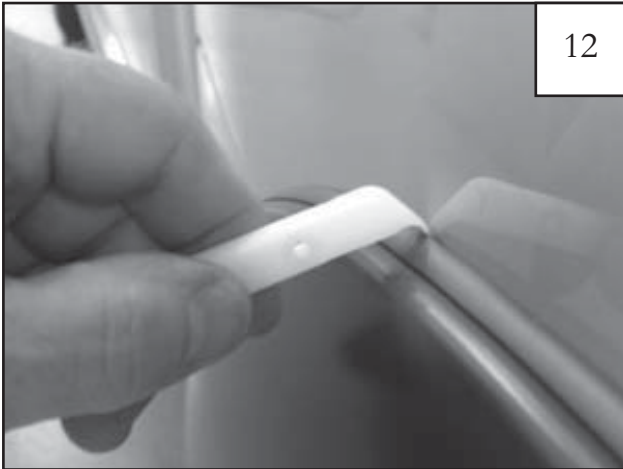

Using supplied Edge Trim Tool (ET1-0002), seat edge trim against vehicle by hooking curved end under edge trim at one end of flare. Next, slide around outer edge of flare to the other end.



Using flat end of supplied Edge Trim Tool (ET1-0002), seat edge trim against flare by inserting straight end between edge trim and flare at one end. Next, slide around entire edge to the other end.