HARDWARE DESCRIPTION		QTY.
HWKT-06123X		
CLIP-00646X	3/8"-16 X 3/4" BARREL NUT CLIP	6
HHCS-00568X	3/8"-16 X 1" GRADE 5 HEX CAP SCREW	6
CARB-00680X	3/8"-16 X 1-1/2" GRADE 5 CARRIAGE BOLT	6
FLHB-00688X	3/8"-16 X 1" GR. 5 HEX SERRATED FLANGE BOLT	6
HXNT-00717X	3/8"-16 GRADE 5 FINISHED HEX NUT	6
FLTW-00663X	3/8" USS FLAT WASHER	12

| PARTS INCLUDED	QTY
Running Boards	2
Rocker Panel mounting Brackets	6
Threaded clamp plates	6

GROWLER
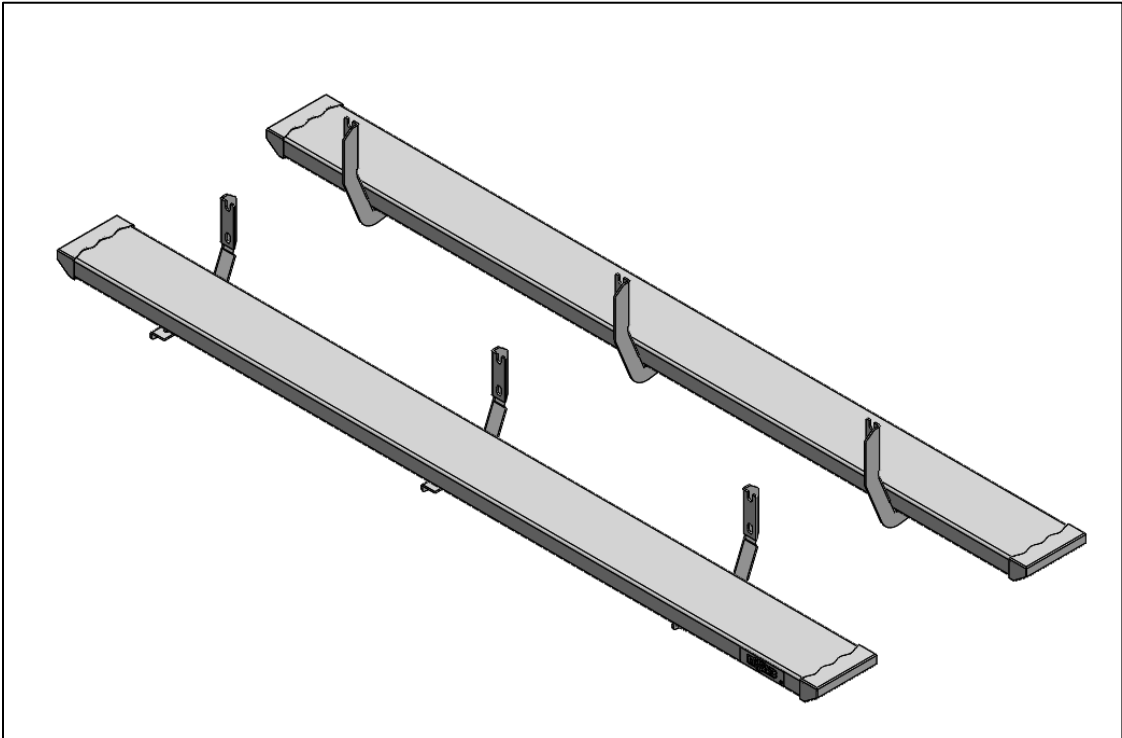
Step 1 Starting with the Driver side, locate the holes for the upper mounts (x3) and install the supplied (x2) 3/8" clips in each position. ***NOTE: There will be four attachment points for the Quad Cab and five for the Crew Cab. Only three will be used for the installation. See below for your cab configuration.***

GFF99-CCTX (Crew Cab)
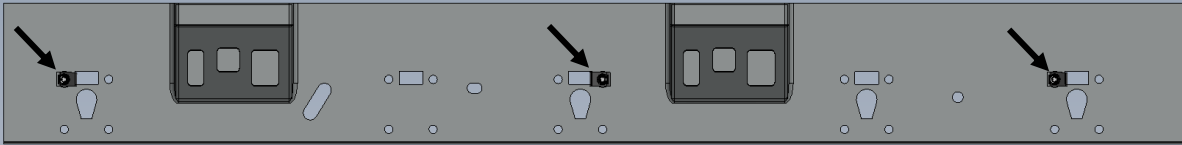
GFF99-QCTX (Quad Cab)

Step 2 Next, install (x3) of the supplied Rocker panel mounting brackets to the factory mounts using the 3/8"x1" Hex bolt, 3/8' USS Flat washer for the upper attachment and the 3/8"x 1 ½" carriage bolt 3/8" Hex nut and 3/8" USS washer for the lower attachment. Leave loose for now. ***NOTE: The carriage bolts will start from the outside of the body, the nut and washer will be only visible from underneath the vehicle.***
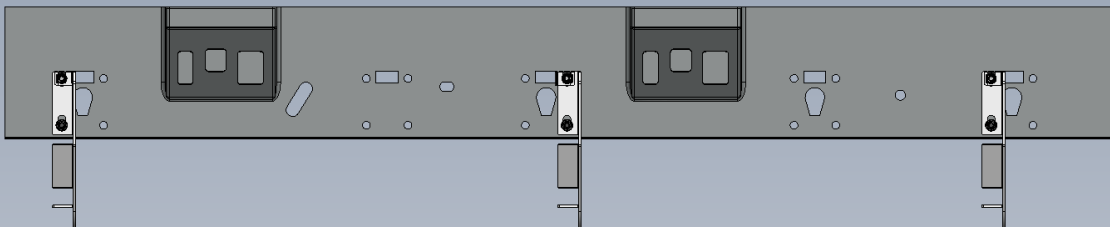
Step 3: Insert the supplied threaded brackets (X3) inside the running board lip over the top of each bracket.
Step 4: With the supplied 3/8" x 1" hex bolts, secure each mounting location and leave loose.
Step 5: After finial adjustment, tighten all running board threaded mounts.
Step 6: Next, adjust frame brackets so the running board is level with body of the vehicle and tighten all factory-mounting locations.
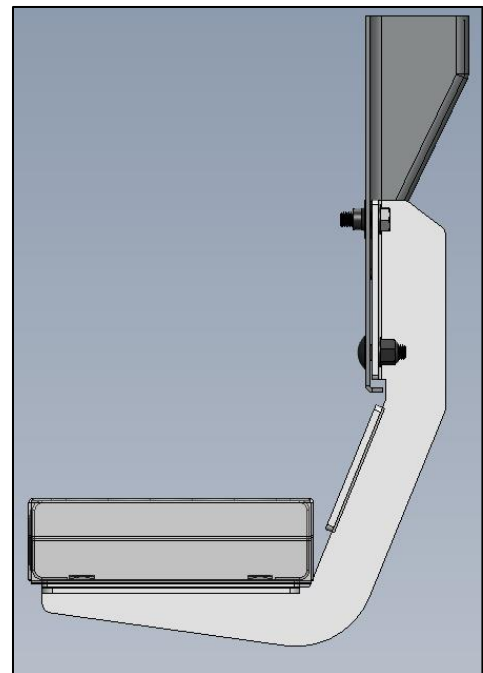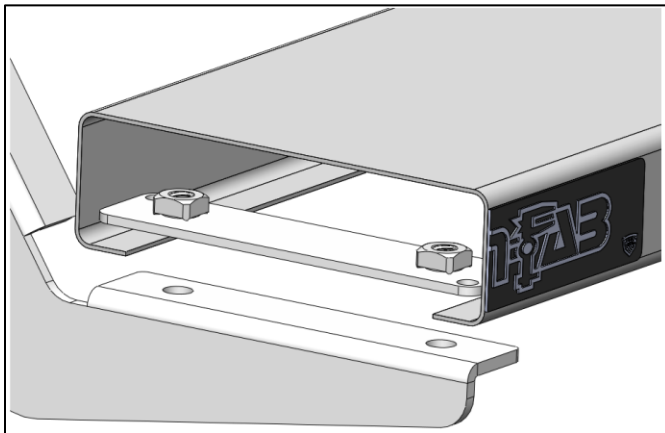
Step 7: Repeat steps 1-6 for passenger side.